


ANCHOR TRENCH

- 1. DIG 6" X 6" TRENCH
- 2. LAY BLANKET IN TRENCH
- 3. STAPLE AT 1.5' INTERVALS
- 4. BACKFILL WITH NATURAL SOIL AND COMPACT
- 5. BLANKET LENGTH SHALL NOT EXCEED 100' WITHOUT AN ANCHOR TRENCH

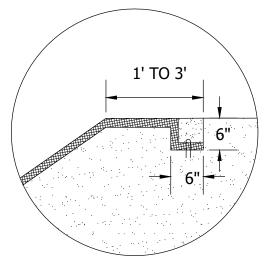



STANDARD DETAILS

ROLLED EROSION PREVENTION PRODUCTS INSTALLATION

COTTAGE GROVE, MINNESOTA

JANUARY 2022

PLATE NO.

ERO-5